

# Guide to Renting Movies on Video OnDemand and Rentals

Press **Menu**, highlight **Rentals** and press **OK**.

## Browse Rentals

VOD Rentals are grouped into categories and sub-categories to make finding what you want very easy.

### Step 1: Pick A Category

The bottom left of your screen lists the main Rental categories.

Highlight a main category and press **OK**.

### Step 2: Browse The Rentals

When you choose a category, a list of available VOD Rentals for that category are shown to the right.

Highlighting a VOD Rental will list information for that Rental in the upper left portion of the screen.

Note: At any time during this process, you can press the **left arrow** button to return to a previous set of categories.

## Rent A VOD Rental

### Step 1: Pick A Rental

Follow Steps 1-2 for "Browse Rentals" to find a VOD Rental in which you are interested. Press **OK**.

### Step 2: Rent

Highlight **Rent** and press **OK**.

### Step 3: Confirm Your Rental

The confirmation screen appears.

If you want other users to be able to watch this VOD Rental, highlight the **Share Rental** check box and press **OK**.

Highlight **Rent** and press **OK** to confirm your VOD Rental, or highlight **Cancel** and press **OK** if you change your mind.

## Watch Your VOD Rental

You can play your VOD Rental from Rentals or from Vault.

Note: For information on the Vault, see section 8 **Vault**.

### Step 1: Pick Your Rental

Highlight your VOD Rental and press **OK**.

### Step 2: Play Your Rental

Highlight **Play From Start** and press **OK** to start play at the beginning of the program.

If you have already watched part of the program and want to pick up where you left off, highlight **Play From Last** and press **OK**.

## Controlling Rental Playback

While watching a VOD Rental, you can use the Playback Control buttons to pause, rewind, fast forward or stop playback.



Press **Pause** to halt playback at the current point.



Press **Rewind** or **Fast Fwd** to reverse or advance playback from the current point.



Press **Play** to resume watching at normal speed.



Press **Stop** to exit playback of the program.

## The Slider

Any time you press a Playback Control button while watching a VOD rental, the Slider appears.

The box at the top left indicates the playback function in use.

The box at the top right indicates the current playing point of the video.

The bar in the middle gives a visual representation of where you are in the program. The lighter section indicates how much of the program has been played.